





Turing & Brivo Cloud to Cloud Integration Configuration Guide



Step 1: Enable Brivo integration

1.1 Users need to go to Devices → Access to turn on Brivo integration.

Click + Add Access Control

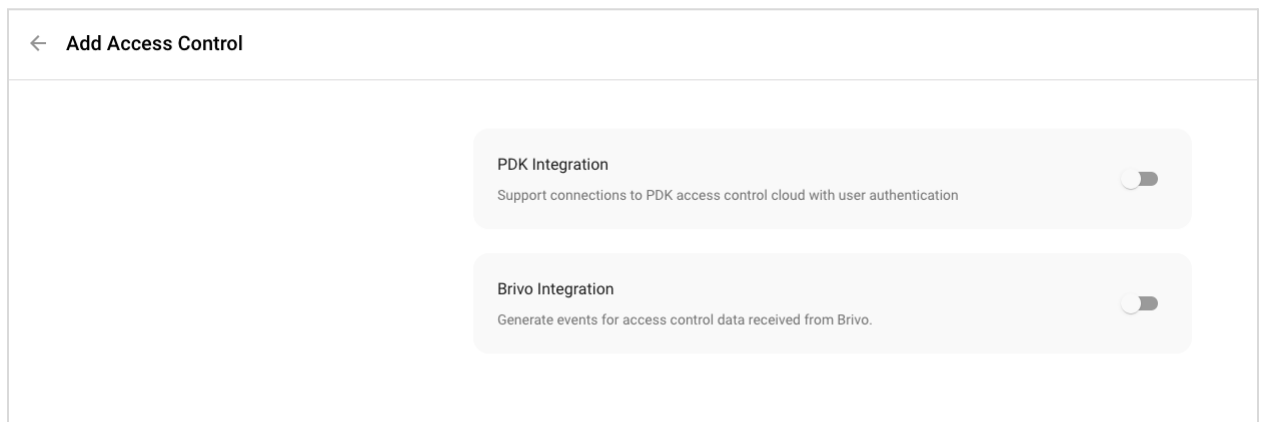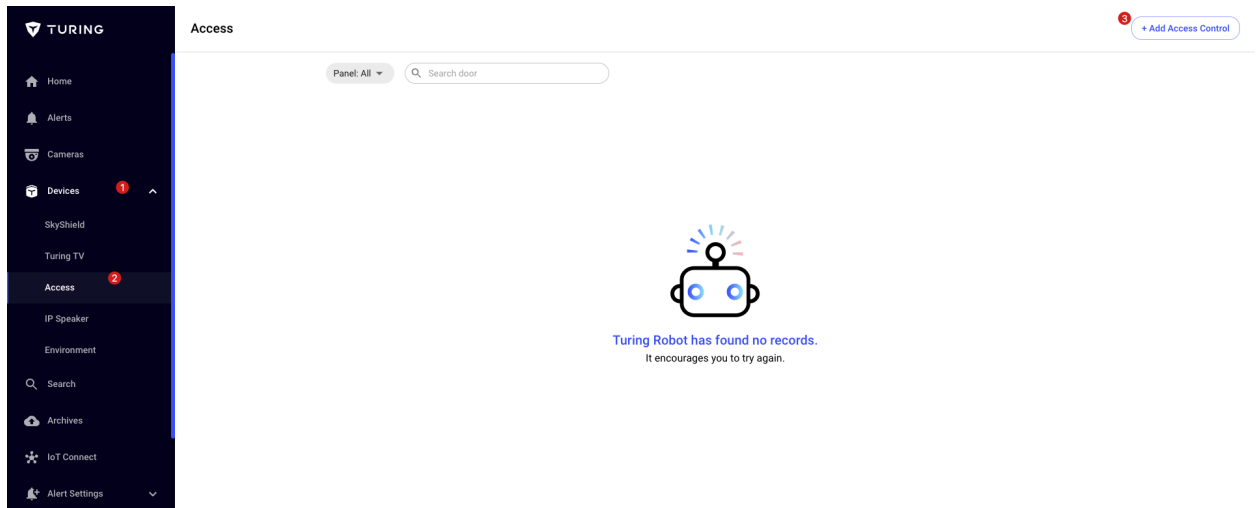

1.2 Turn on the Brivo Integration toggle.

PDK Integration

Support connections to PDK access control cloud with user authentication

Brivo Integration

Generate events for access control data received from Brivo.

Api Key for Brivo Integration

Get your API key from your dealer.

Link Brivo Account

Control Panel ID

+ Panel

Account Sync

After linking an account, any new devices added to the Brivo system can take 20 minutes to sync back to Vision

Sync

Remove Integration


Delete your integration for your organization. This operation cannot be undone.

Remove

1.3 Enter the API Key for Brivo. The key is provided by Brivo to the Dealer Administrator.

1.4 Click the **Link Brivo Account button** and in the pop-up window, enter in your account credentials found by clicking on your profile name within your Brivo account.

Note: In the pop up window, the Username refers to Admin ID, not the Brivo Portal login user name.

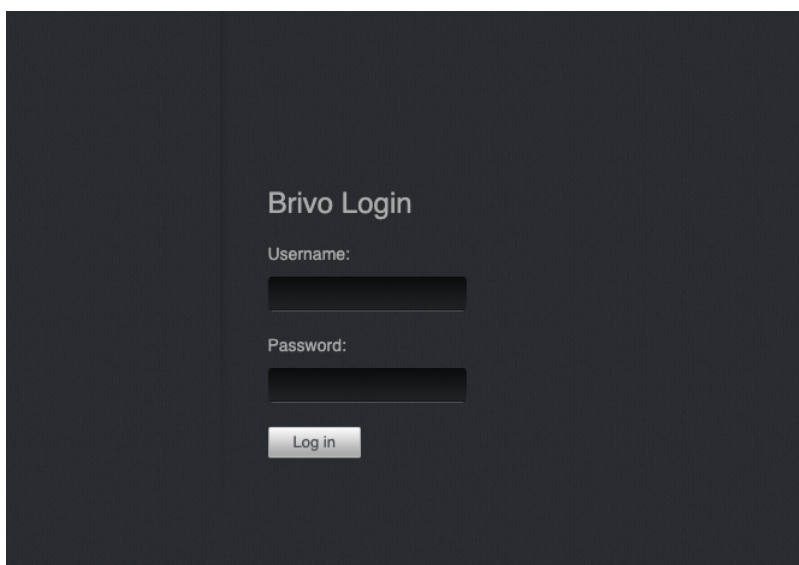


Brivo Login

Username:

Password:

Log in

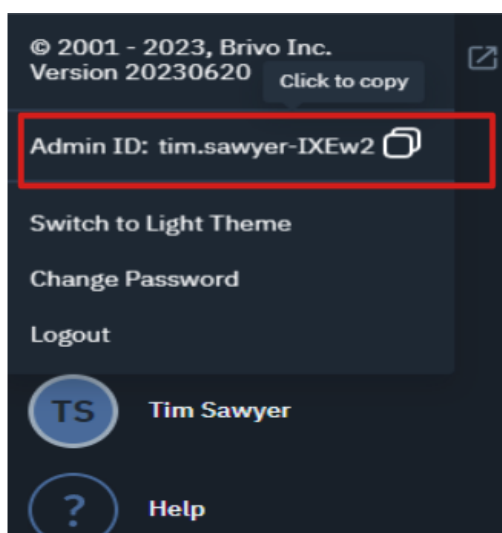

© 2001 - 2023, Brivo Inc.
Version 20230620 [Click to copy](#)

Admin ID: tim.sawyer-IXEw2 [Copy](#)

Switch to Light Theme

Change Password

Logout


TS Tim Sawyer

? Help

- 1) After enter Username and Password in the pop up window, it will automatically go back to Vision page;
- 2) Add Control Panel ID. (This is the "CP #" and include the - between numbers ex. OHB-YA-YT3SD) This step allows you to choose only the desired Panel ID to be added into Turing Vision.

Step 2: Mapping Brivo Reader to Vision Camera


2.1 After Step 1 is completed, there will be a list of readers (doors) on the Access page, but there will be no link to cameras. And users can map up to four cameras to one Brivo reader.

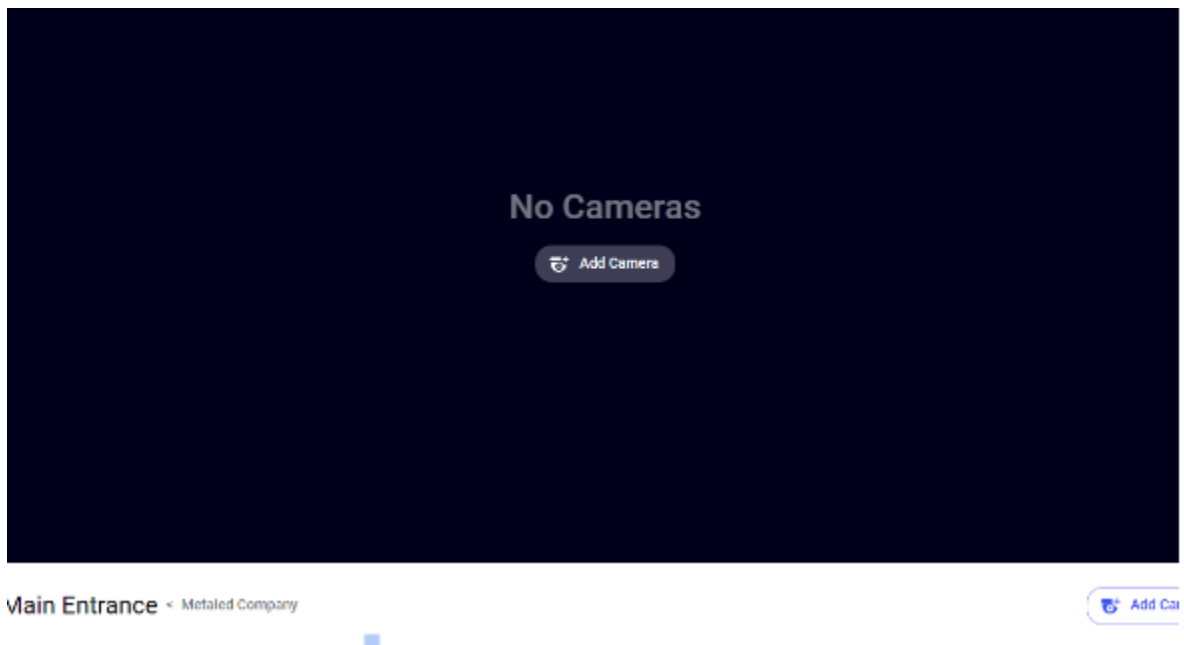

Note: Only CORE AI licensed cameras can be mapped with Brivo Reader. Up to 4 cameras can be mapped with one Reader.

Step 3: Begin using Brivo and Vision

3.1 After mapped cameras, you shall be able to view camera live streaming by clicking the door icon and could also **open door remotely** from this page

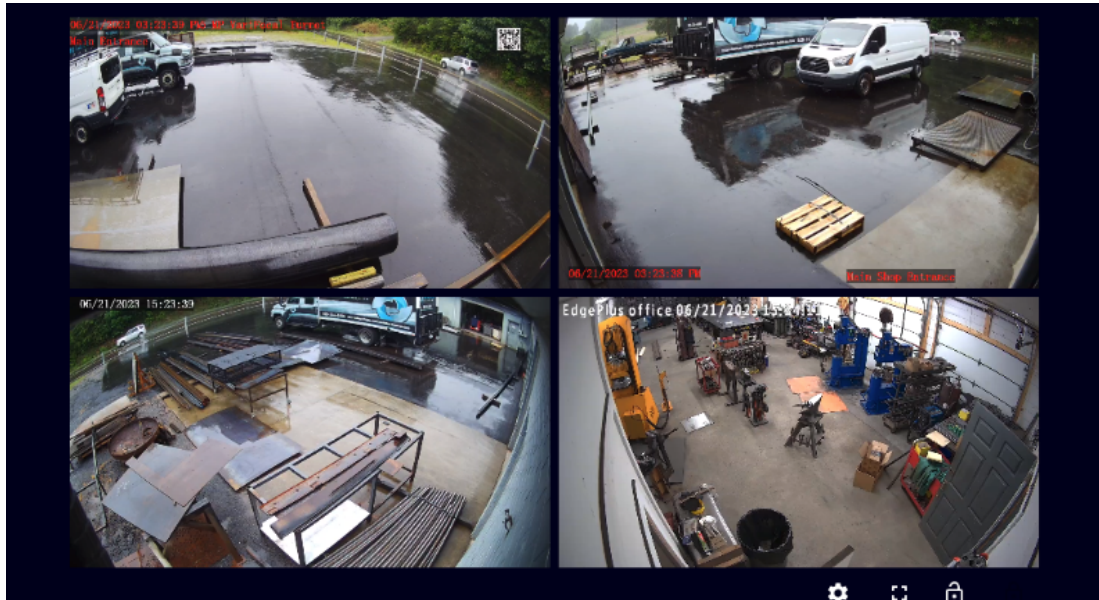

3.2 In the search page, user can search Brivo Events on Vision by event types and last 7 days by default

Main Entrance < Metaled Company
Add Camera

Event Type: All
Time: Last 7 days
Integration: BRIVO

Event type	Event Details	Reader	Time
Access Allowed	Administrator Pulse Output	Main Entrance	Jun 21, 2023 at 14:34:25 pm
Access Allowed	Administrator Pulse Output	Demo Door	Jun 21, 2023 at 14:34:22 pm
Access Allowed	Valid access	Main Entrance	Jun 21, 2023 at 13:45:13 pm
Access Allowed	Valid access	Main Entrance	Jun 21, 2023 at 11:36:41 am
Access Allowed	Administrator Pulse Output	Main Entrance	Jun 20, 2023 at 15:43:11 pm
Access Allowed	Valid access	Demo Door	Jun 20, 2023 at 15:39:44 pm
Door Force Open	Door Forced Open	Demo Door	Jun 20, 2023 at 15:36:59 pm
Access Allowed	Administrator Pulse Output	Demo Door	Jun 20, 2023 at 15:32:27 pm
Access Allowed	Administrator Pulse Output	Demo Door	Jun 20, 2023 at 15:31:01 pm

3.3 By clicking the event, the user could view the event playback video which is tied with the event.

